


Usage Instructions:

1. Remove nut and ferrules from body.
2. Place plug assembly onto HOKE Gyrolok fitting body. Tighten to hand-tight condition.
3. Turn nut with wrench until sharp rise in torque. Then snug tight. (Do not tighten 1 1/4 turns. No ferrules to set).

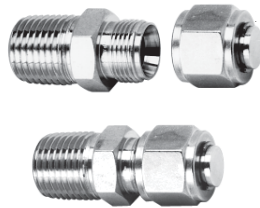

Plug Assembled to HOKE Gyrolok Body

Plug: P fractional for Gyrolok ports

Part Number*	Dimensions — inches	
	A	B
	Fitting Size	Hex Size
1P []	1/16	5/16
2P []	1/8	7/16
3P []	3/16	1/2
4P []	1/4	9/16
6P []	3/8	11/16
8P []	1/2	7/8
10P []	5/8	1
12P []	3/4	1 1/8
14P []	7/8	1 1/4
16P []	1	1 1/2
20P []	1 1/4	1 7/8
24P []	1 1/2	2 1/4
32P []	2	3

Plug: P/MM metric for Gyrolok ports

Part Number*	Dimensions — mm	
	A	B
	Fitting Size	Hex Size
3P []MM	3	11.1
4P []MM	4	12.7
6P []MM	6	14.3
8P []MM	8	15.9
10P []MM	10	19.1
12P []MM	12	22.2
14P []MM	14	23.8
15P []MM	15	23.8
16P []MM	16	25.4
18P []MM	18	28.6
20P []MM	20	31.8
22P []MM	22	31.8
25P []MM	25	38.1
30P []MM	30	50.8
32P []MM	32	50.8
38P []MM	38	60.3